




广州市靓馨情建材有限公司

GUANGZHOU PRETTY WARM-HEARTED FEELING BUILDING MATERIALS CO.,LTD

工厂地址：广州市白云区钟落潭镇红旗中心街一巷101房

公司官网：www.liangxq.com

公司邮箱：1402662547@qq.com

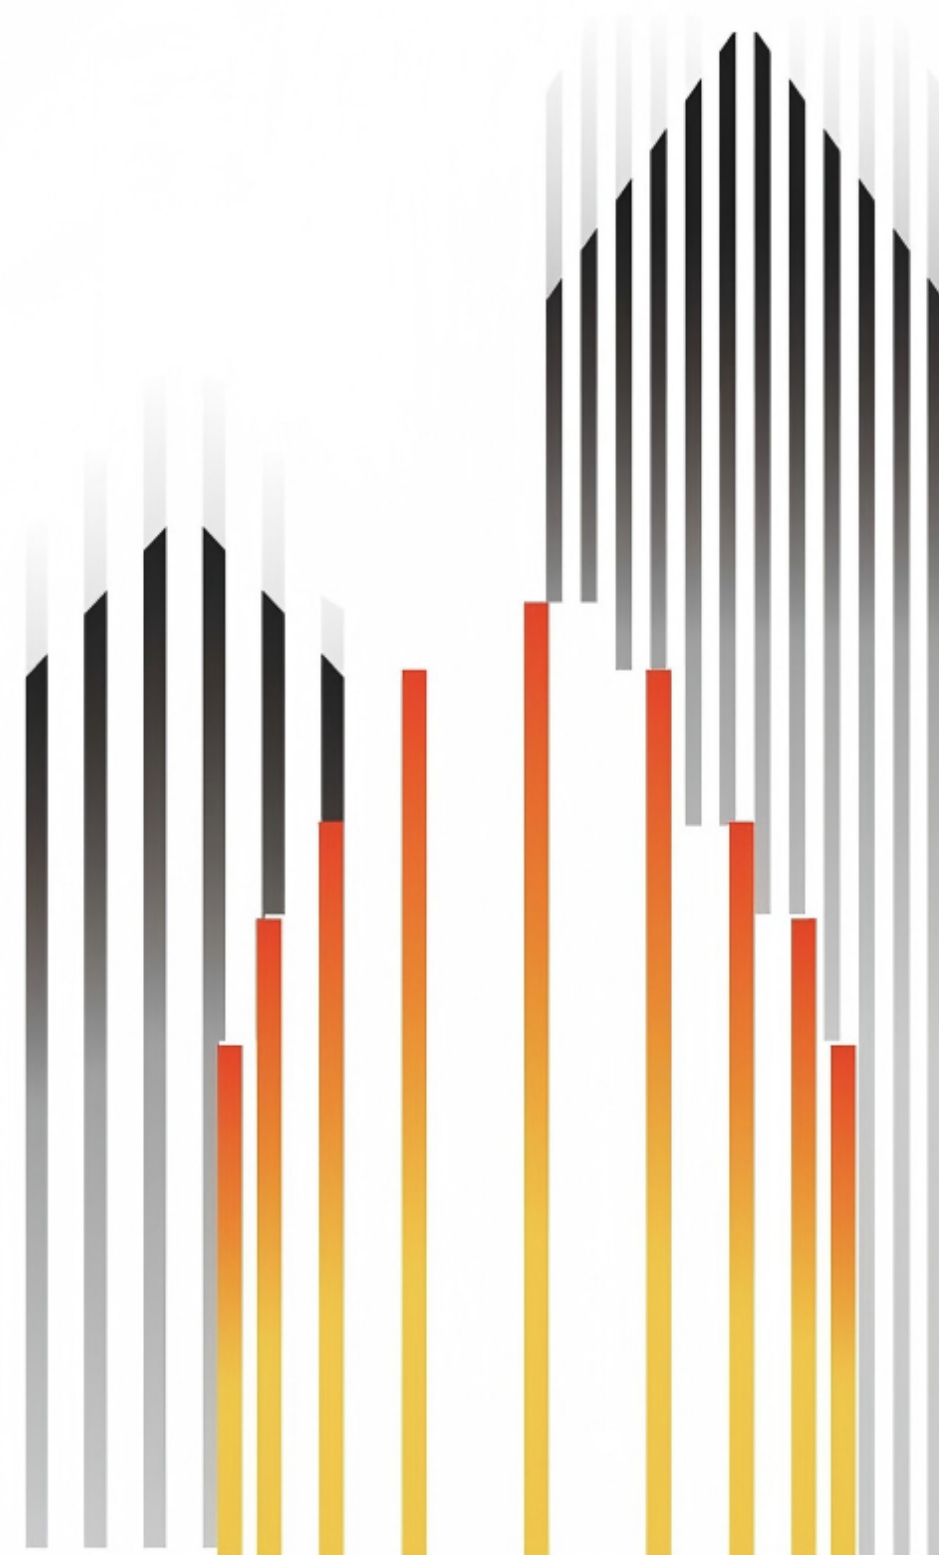

PRODUCT MANUAL
产 品 手 册 2026

关于靓馨情 About Liangxin Qing



靓馨情成立于 2011 年，深耕板材隔断行业 15+, 专注抗倍特 HPL 高压耐火装饰板材全产业链生产与配套工程落地，面向全国工装工程、政府采购、外贸出口提供一站式板材解决方案

主营产品：抗倍特板、铝蜂窝复合板、PVC 防水板、不锈钢隔断，全套配套供应

Liangxinqing was established in 2011 and has been deeply involved in the panel partition industry for 15 years, focusing on the full-industrial-chain production and supporting engineering implementation of antibacterial HPL high-pressure fire-resistant decorative panels. It provides one-stop panel solutions for national commercial projects, government procurement, and foreign trade exports

Main products: HPL panels, aluminum honeycomb composite panels, PVC waterproof panels, stainless steel partitions, with complete supporting supplies

企业证书 Business



获得荣誉 Receive Honor



目录

抗倍特隔断系统 (Antibacterial Partition System)

F001	尼龙款	5 页
F002	02 款	7 页
F003	304A 款	9 页
F004	304B 款	11 页
F005	纯 304 款	13 页
F006	吊码款	15 页
F007	316 款	17 页
F008	罗马柱款	19 页

蜂窝隔断系统 (Honeycomb Partition System)

F009	复合蜂窝 A 款	21 页
F010	复合蜂窝 B 款	23 页
F011	弧形复合 A 款	25 页
F012	弧形复合 B 款	27 页

隔断铝材样式 (Partition Aluminum Material) 29 页

隔断安装步骤 (Partition Installation Steps) 33 页

工程案例 (Engineering Case) 35 页

一站式服务流程



项目咨询

专业团队，快速响应客户需求，专业报价



现场测距

根据现场数据生产，减少误差



项目设计

根据场景数据设计合适的产品尺寸，进一步确定，定制配件和板材



备货生产

专业生产师傅，根据实际尺寸备货，减少多余损耗



跨境配送

根据项目选择配送形式，选择合适、游湖的配送方式



安装指导

有专业施工团队施工方便快捷，也可专员进行远程指导



维修售后

因某些特定条件的可售后更换，不满条件也可进行维修



F001 — 尼龙款 (Nylon fittings)



角码

Angle Code



锁面

Lock surface



合页

Hinge



衣钩

Clothes Hook



锁背

Lockback



拉手

Hold hands



支脚

Support Leg



F002 — 202 款 (Metal Fittings)



角码
Angle Code



锁面
Lock surface



合页
Hinge



衣钩
Clothes Hook



锁背
Lockback



拉手
Hold hands



支脚
Support Leg



F003 — 304A 款 (Stainless Steel A Fittings)



角码
Angle Code



锁面
Lock surface



合页
Hinge



衣钩
Clothes Hook



锁背
Lockback



拉手
Hold hands



支脚
Support Leg



F004 — 304B 款 (Stainless Steel B Fittings)



角码

Angle Code



锁面

Lock surface



合页

Hinge



衣钩

Clothes Hook



锁背

Lockback



拉手

Hold hands



支脚

Support Leg



F005 — 纯 304 款 (Stainless Steel Fittings)



角码
Angle Code



锁面
Lock surface



合页
Hinge



衣钩
Clothes Hook



锁背
Lockback



拉手
Hold hands



支脚
Support Leg



F006 — 304 吊码款 (Steel Hanger Fittings)



角码
Angle Code



锁面
Lock surface



合页
Hinge



衣钩
Clothes Hook



锁背
Lockback




拉手
Hold hands



支脚
Support Leg

可选 (Optional)

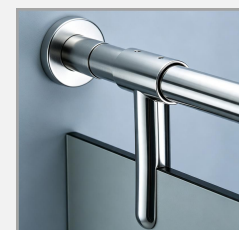

吊夹
Hanger Clamp



斜吊夹
Oblique Clamp



F007 — 316 款 (316 Accessories)




角码
Angle Code



锁面
Lock surface



合页
Hinge

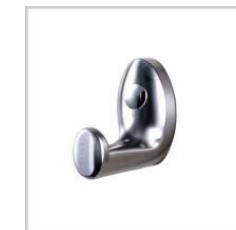

衣钩
Clothes Hook



锁背
Lockback



合页背
Hinge Back



支脚
Support Leg



F008 — 罗马柱 (Roman Column Accessories)



角码

Angle Code



锁面

Lock surface




合页

Hinge



衣钩

Clothes Hook

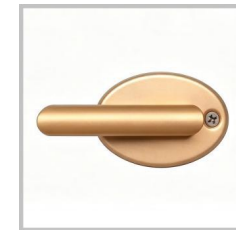

锁背

Lockback




合页


Hinge




F009 复合蜂窝板 (Composite Panel)

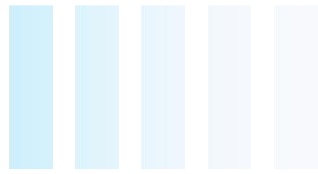


F010 复合蜂窝板 (Composite Panel)

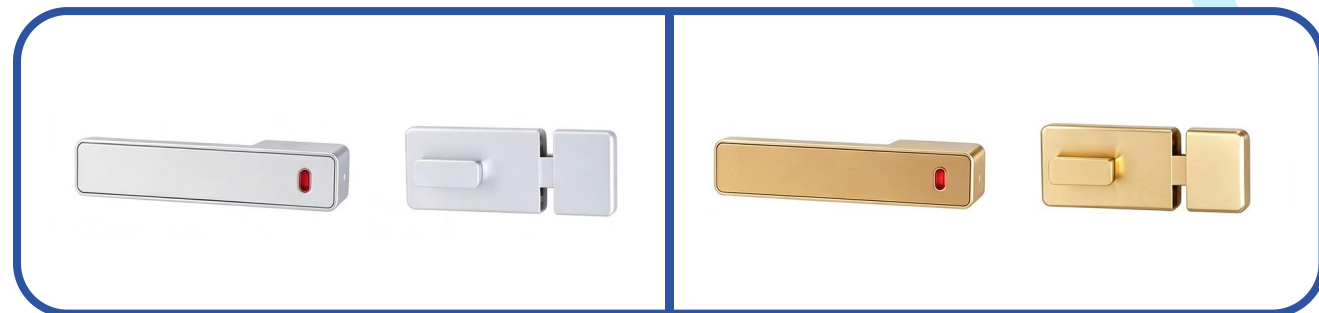

F011 弧形复合板 (Arc-shaped plate)

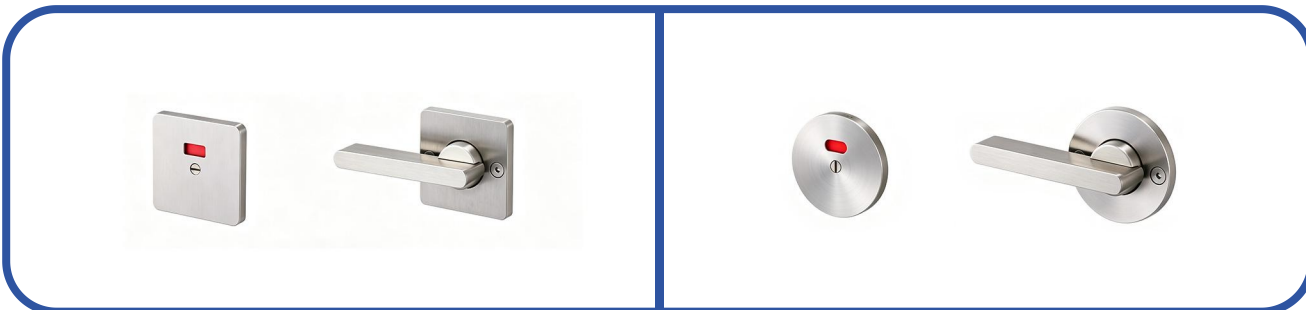

F012 弧形复合板 (Arc-shaped plate)

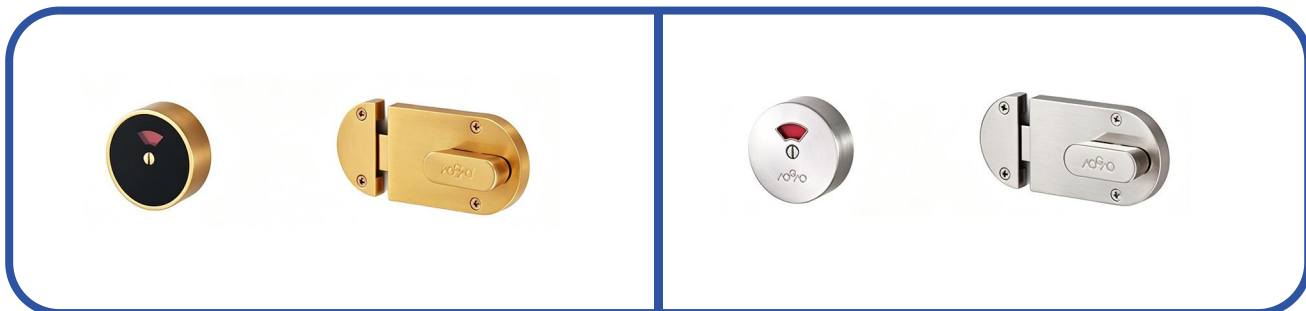

拉杆 Lever



010 (Lever)
颜色：黑色、钢色、拉丝
规格：12/18mm
长度：6m



014 (Lever)
颜色：黑色、钢色、拉丝
规格：12/18mm
长度：6m



017 (Lever)
颜色：黑色、钢色、拉丝
规格：12/18mm
长度：6m



013 (Lever)
颜色：黑色、钢色、拉丝
规格：12/18mm
长度：6m

拼接条 Splicing Strip



028 (Splicing Strip)
颜色：黑色、钢色、拉丝
规格：12/16/18mm
长度：4/6m

转角边 Corner edge



029 (Splicing Strip)
颜色：黑色、钢色、拉丝
规格：12/16/18mm
长度：4/6m

固定边 Fixed edge



026 (Fixed edge)
颜色：黑色、钢色、拉丝
规格：12/18mm
长度：4/6m

封边 Edge banding



030 (Edge banding)
颜色：黑色、钢色、拉丝
规格：12/16/18/26/36mm
长度：4m

门挡边 Door Stop Edge



018 (Door Stop Edge)

颜色：黑色、钢色、拉丝

规格：12/18mm

长度：3.7/4m



019 (Door Stop Edge)

颜色：黑色、钢色、拉丝

规格：12/18mm

长度：3.7/4m



020 h形 (Door Stop Edge)

颜色：黑色、钢色、拉丝

规格：12/18mm

长度：6m



021 (By the door)

颜色：黑色、钢色、拉丝

规格：12/18mm

长度：6m

门边 By the door



022 (By the door)

颜色：黑色、钢色、拉丝

规格：12/18mm

长度：3.74m



023 (By the door)

颜色：黑色、钢色、拉丝

规格：12/18mm

长度：3.74m

地脚套 Base Sleeve



024 (Base Sleeve)

颜色：黑色、钢色、拉丝

规格：12/18mm

长度：6m




025 (Base Sleeve)

颜色：黑色、钢色、拉丝

规格：12/18mm

长度：6m

安装步骤 (Installation Steps)

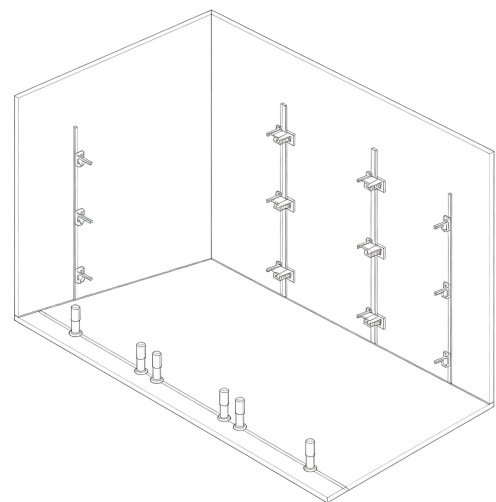

3. **固定支撑脚** 校对预留门扇与门缝的水平尺寸进行定位，在支撑脚底座钻孔，上胶塞、拧螺丝，把全部支撑脚固定到对应位置



4. **墙体固定角码** 在墙体上画出角码的中心线（一般在两侧位中心位置），确定三点位置后用电钻钻孔，预埋胶塞，再把角码固定在墙面上

1. Fixed support feet: Align and check the horizontal dimensions of the reserved door leaf and door gap for positioning. Drill holes in the base of the support feet, insert glue plugs, and screw in the screws to secure all the support feet in their corresponding positions.
2. Wall-mounted angle brackets: Draw the centerline of the angle bracket on the wall (usually at the center positions on both sides). After determining the positions of three points, drill holes with an electric drill, insert glue plugs, and then secure the angle bracket to the wall.

1. **固定 T 板 (前挡板) 和 P 板 (中隔板)** 对照支撑脚与角码的对应位置，在 T 板上标记出和 P 板的连接位置，装上角码，将 T 板与 P 板拼接成 “⊥” 字型

2. **初步成型卫生间** 把拼接好的 “⊥” 字型骨架，对准已经装好的支撑脚和角码，拧上螺丝，卫生间隔断初步成型

3. Fix the T board (front panel) and the P board (middle partition) by aligning them with the support legs and angle brackets. Mark the connection positions with the P board on the T board, install the angle brackets, and assemble the T board and P board into a '⊥' shape.
4. Preliminary formation of the bathroom: Align the assembled '⊥'-shaped frame with the already installed support legs and angle brackets, tighten the screws, and the bathroom partition is preliminarily formed.

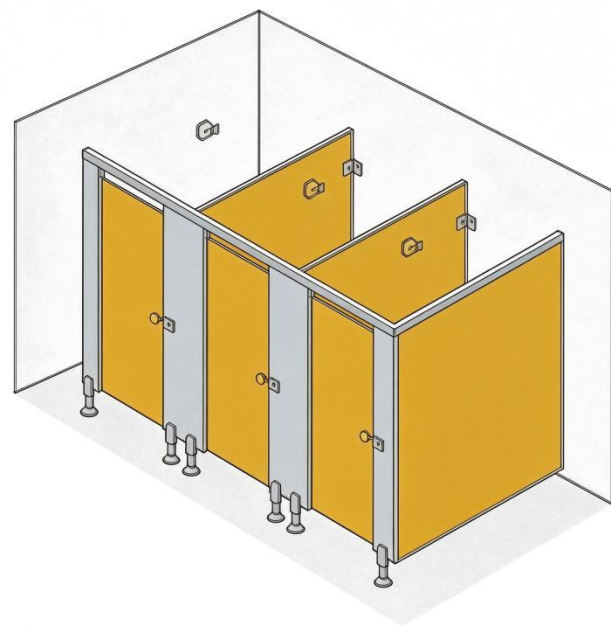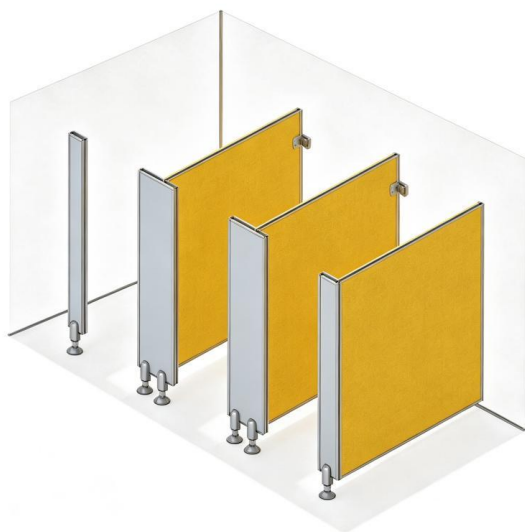

5. **安装横拉杆** 在 T 板上装上拉杆，调准各个门缝预留尺寸，逐个用螺丝锁紧固定

6. **安装门扇** 先把合页顶座（不带盖）装在门扇上，靠上门扇，预留好双边门缝；再把合页底座（合页下部分）贴到对应位置拧好螺丝，调节合页的回位角度，保证门扇开关顺畅

7. **安装门锁及有人无人指示件** 按照锁具的孔距，在门扇、T 板上定位划线、钻孔，装好有人无人指示配件，拧紧螺丝

8. **安装衣钩、装饰盖，整体检查** 装好衣帽钩，盖上螺丝盖、合页盖；做一遍全面检查调试，卫生间隔断安装完成

5. Install the crossbar: Mount the pull rod on the T board, adjust the reserved dimensions for each door gap, and tighten the screws one by one to secure it firmly.
6. Install the door panel: First, attach the hinge top bracket (without cover) to the door panel, align it with the upper door panel, and reserve the double-sided door gaps; then attach the hinge base (lower part of the hinge) to the corresponding position and tighten the screws, adjusting the hinge return angle to ensure smooth door operation.
7. Install the door lock and occupied/vacant indicators: According to the lock hole spacing, mark and drill holes on the door panel and T board, install the occupied/vacant indicator components, and tighten the screws.
8. Install coat hooks and decorative covers, and perform an overall inspection: Install the coat and hat hooks, cover the screw and hinge covers; perform a comprehensive inspection and adjustment to complete the installation of the restroom partitions.

利通大厦 (Litong Building)



中山大学 (Sun Yat-sen University)



梅州嘉应学院 (Meizhou Jiaying)



广州地铁 (subway)



广州市第八人民医院(Hospital)



珠江新城 (Zhujiang New Town)



珠海格力公司(Zhuhai Gree Company)



久光中心 (Hisamitsu Center)

